

SUMMIT


ROOFING & GUTTERING CONTRACTORS

LEAD WORK - CHIMNEYS

Checkatrade



Remove tiles to rear and sides of chimney and put to one side. grind a 40mm chase into the course work of the chimney. Fit a new code 4 lead apron flashing to the front of the chimney. Re-fit tiles to sides of the chimney with new aluminum soaker on every tile.

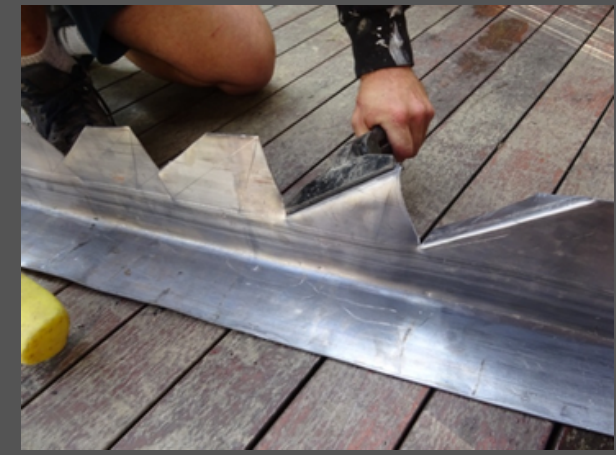

Fit new code 4 lead step or straight flashing to the sides of the chimney and dress into position. (step flashing will be cut and shaped before the fitting) using code 5 lead cut and weld the rear box gutter to size and shape ready for fitting



Install the box gutter to the rear of the chimney and fit a new code 4 lead cover flashing. Re-fit tiles to rear of the chimney. point in the lead work to the chimney using lead mate sealant or a 3-1 mortar mix. finally oil using paternation oil.